REVO M-1PH 35A - 40A

Universal Unit




GENERAL DESCRIPTION

- Revo M has been specifically designed to be an Universal Unit
- RS485 Comm. MODBUS Protocol Standard
- Frontal Key Pad to configure the unit and to read V,I and Power
- Configurablity via RS485, USB Port and frontal Key Pad
- Microprocessor based electronic circuit fully isolated from power
- Universal input signal: RS485,Pot, Analog and SSR
- Universal Firing Mode: Soft Start + Phase Angle, Delayed Triggering Firing, Single Cycle, Burst Firing
- Configurable Control Mode: V, I, V^2 and VxI
- Heather Break alarm to diagnose partial or total load failure and Thyristor Short circuit
- Digital input configurable
- Fuse and Fuse Holder Standard
- Current transformer integrated in Fuse Holder
- Comply with EMC, cUL pending
- IP20 Protection
- DIN RAIL mounting

TECHNICAL SPECIFICATION

Voltage power supply	From 24V to 480V Max (Std) or 600V on request		
Voltage Frequency	50 or 60 Hz no setting needed from 47 to 70 Hz		
Nominal Current	35A, 40A		
Input Signal	SSR (logic)	4:30Vdc	5mA Max (On ≥ 4Vdc Off ≤ 1Vdc);
	Voltage input	0:10Vdc	impedance 15 K ohm;
	Current input	0:20/4:20mA	impedance 100 Ohm;
Digital input	4:30V dc 5 mA Max (On > 4Vdc Off < 1Vdc)		
Firing	Soft Start + Phase Angle, Delay Triggering + Burst Firing, Soft Start + Burst Firing, Single Cycle, Selectable from frontal Key-Pad or via RS485.		
Control Mode	Voltage, Current, Square Voltage and Power selectable via frontal Key Pad, and RS485 or via Digital input to transfer from one control mode to another one to estabilish a control strategy.		
Auxiliary Voltage Supply	90:130Vac 8VA Max 170:265Vac 8VA Max (Standard) 230:345Vac 8VA Max 300:530Vac 8VA Max (Standard) 510:690Vac 8VA Max		
Heater Break Alarm	HB alarm setting on front unit or RS485 with possibility to set sensitivity. Relay output 0,5A at 110V		
Mounting	DIN RAIL Mounting or Panel Mounting		
Operating Temperature	40 °C without derating. Over this temperature see below derating curve		
Storage temperature	-25 °C to 70 °C Max		
Altitude	Over 1000 m of altitude reduce the nominal current of 2% for each 100m		
Humidity	From 5 to 95% without condense and ice		

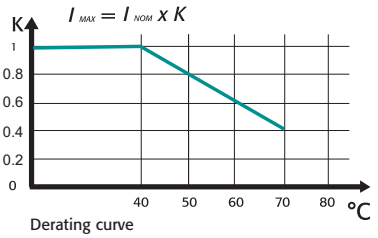

Derating curve

OPTION'S FEATURES AND SPECIAL DETAILS

HEATER BREAK ALARM (HB)


ON FRONT CABINET



= FEW MINUTES TO SET AND CALIBRATE ALL THE UNITS


The Heather Break circuit diagnostic partial or total load failure. It reads load resistance with an internal voltage transducer and current transformer to calcolate the resitance value V/I
circuit is compensated for voltage fluctuation,infact a voltage variation has no influence on resistance value because V/I ratio remain constant.
On this unit is possible to set the nominal resistance value and the alarm sensitivity.
HB alarm in addition diagnostic the thyristor in short circuit
A normaly open contact gives the alarm condition and an indication of the alarm type appears on display.

BURST FIRING

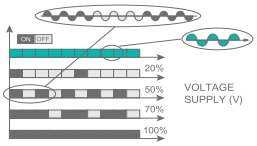


This firing is performed digitally within the thyristor unit at zero volts, producing no EMC interference. Analogue input is necessary for BF and the number of complete cycles must be specified for 50% power demand. This value can be between 1 and 255 complete cycles, determining the speed of firing. When 1 is specified, the firing mode becomes Single Cycle (SC).

PHASE ANGLE PA



PA controls the power to the load by allowing the thyristor to conduct for part of the AC supply cycle only. The morepower required, the more the conduction angle is advanced until virtually the whole cycle is conducting for 100% power. The load power can be adjusted from 0 to 100% as a function of the analogue input signal, normally determined by a temperature controller or potentiometer, PA is normally used with inductive loads.

DELAYED TRIGGERING DT



Used to switch the primary coil of transformers when coupled with normal resistive loads (not cold resistance) on the secondary, DT prevents the inrush current when zero voltage (ON-OFF) is used to switch the primary. The thyristor unit switches OFF when the load voltage is negative and switches ON only when positive with a pre-set delay for the first half cycle.

CD EASY




This is a memory support tool that can be used by mantenance personnel on shop floor.
The user can copy the configuration of one unit and paste it into another.CD EASY is very simple with one push button to upload the configuration (Read and another to down load the stored configuration (Write)
This tool can be used with our Remote service to mail the working configuration via internet.

FIELD BUS MODULE



CD-RS Used to convert RS232 to RS422
TU-RS485-PDP Used to convert RS485 Modbus to Profibus DP
TU-RS485-DNE Used to convert RS485 Modbus to Devicenet
TU-RS485-ETH Used to convert RS485 Modbus to Ethernet
TU-RS485-CAN Used to convert RS485 Modbus to CAN
For more informations see "Field Bus Module" Bulletin

POWER SCALING

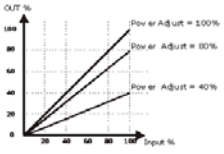


It's a scaling factor of the input command signal and limit the output of Thyristor unit. This parameter can be adjusted from 1 to 99% via RS485 or by the front of the unit If this parameter is setted at 50% and the input signal is 100% the output become 50% This feature is very useful to reduce the power when a zone has been oversized or when a temperature controller gives same reference to more unit along a furnace.
Imagine 3 zones with left and right one close to the doar where in acontinuos furnace the material come into and flow out.The profile of temperature along furnace is higher in central zone because there is less dispersion but if we scale its input we can have a flat profile.


APPLICATIONS AND FOCUS ON:

- Infrared lamp.
- Autoclaves.
- Fournaces.
- Chemical
- Petrochemical
- Extrusion line.
- Dryers
- Climatic chambers
- Pharmaceutical

Wiring connection REVO M 1PH 35A - 40A

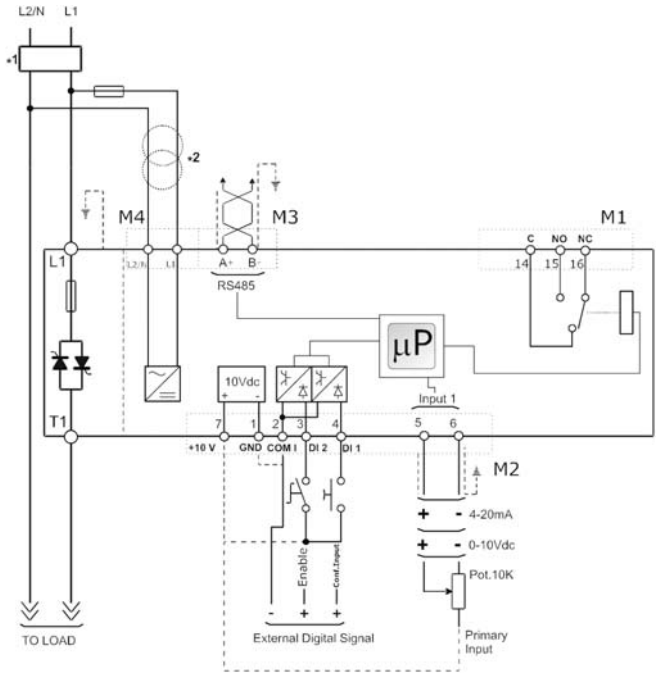


LOAD TYPE

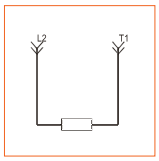

Resistance and Infrared Lamps Long and medium waves

LOAD TYPE

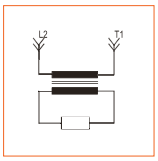


Use Delayed Triggering for transformers coupled with Normal resistance

NOTE

(1) • The user installation must be protecting by electromagnetic circuit breaker or by fuse isolator. The semiconductor I^2t should be 20% less than power controller I^2t. Semiconductor fuses are classified for UL as supplemetar protection for semiconductor. They are note approved for branch circuit protection.


(2) • The auxiliary voltage supply of the Revo unit must be synchronized with load voltage supply. If the Auxiliary Voltage (written on the identification label) is different from Supply Voltage (to the load), use an external transformer connected as above.


DIMENSION AND FIXING HOLES

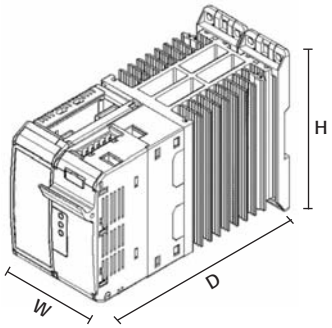

SR9 W 72 mm. - H 121 mm. - D 185 mm. - kg. 1,15

REVO M 35A - 40A

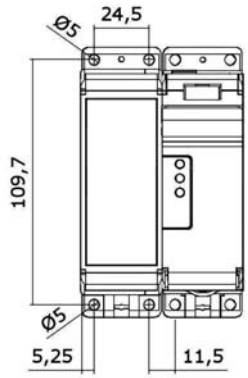

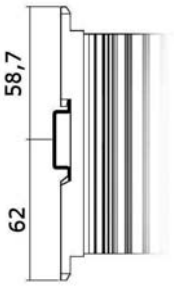

OUTPUT FEATURES (POWER DEVICE)

Nominal current in continuos service:	35A, 40A
Max peak current (10ms)	600A for unit type 035 800A for unit type 040
Voltage range:	24÷600V
Repetitive peak reverse voltage:	1200V (480V), 1600V (600V)
Latching current:	250mA
Leakage current:	15mA eff
I²t value tp=10msec:	1750A²/S for unit type 035 3110A²/S for unit type 040
Frequency range:	47÷70Hz
Power loss (I=Inom):	44W for unit type 035 50W for unit type 040
Isolation Voltage:	2500Vac

ORDERING CODES REVOM 1PH

Note 3

	1	2	3	4	5	6		7	8	9	10	11	12	13	14	15	16
REVO M 1PH	R	M	1	_	_	_	-	_	_	_	_	_	_	_	_	_	_

4, 5, 6 Current

Description code	Numeric code
35A	0 3 5
40A	0 4 0

7 Max Voltage

Description code	Numeric code
480V	4
600V	6

8 Aux. Voltage supply

Description code	Numeric code
90:130V (4)	1
170:265V (4)	2
230:345V (4)	3
300:530V (4)	5
510:690V (4)	6

9 Input

Description code	Numeric code
SSR	S
0:10V dc	V
4:20mA	A
10KPot	K
RS485	R

10 Firing

Description code	Numeric code
Zero Crossing ZC	Z
Single Cycle SC	C
Burst Firing BF	B
Soft Start + Burst Firing S+BF	J
Delayed Triggering + Burst Firing DT+BF	D
Phase Angle PA	P
Soft Start + Phase Angle S+PA	E

11 Control Mode

Description code	Numeric code
Open Loop	0
Voltage Feed Back V	U
Power Feed Back VxI	W
Voltage Square f/b V²	Q
Current Feed Back I	I

12 Fuse & Option

Description code	Numeric code
Fuse + Fuse Holder	Y
Fuse + Fuse Holder +CT +HB	H

13 Fan Voltage

Description code	Numeric code
No Fan	0

14 Approvals

Description code	Numeric code
CE EMC For European Market	0
cUL For American Market, Pending	L

15 Manual

Description code	Numeric code
None	0
Italian Manual	1
English Manual	2
German Manual	3
French Manual	4

16 Version

Description code	Numeric code
Std version with one fuse+ Fuse Holder	1
Second fuse used with Phase to Phase voltage Supply for unit (1)	2
Second fuse + additional safety relay (2)	3

LEGEND
CT = Current Transformer
HB = Heater Break Alarm

Note (1): **If you need one REVO M 1PH with 2 Fuse & Fuse Holder For dimensions see REVO M 2PH.**
Note (2): **If you need one REVO M 1PH with 2 Fuse & Fuse Holder + safety relay For dimensions see REVO M 2PH.**
Note (3): **After 16th digit write current and voltage of load inside brackets Ex. (40A-400V)**
Note (4): **Load voltage must be included in Selected Auxiliary Voltage Range**