REVO M-3PH from 225A to 500A

Universal 3 Phase Thyristor Unit




GENERAL DESCRIPTION

- Revo M has been specifically designed to be an Universal Unit
- RS485 Comm. MODBUS Protocol Standard
- Frontal Key Pad to configure the unit and to read V,I and Power
- Configurablity via RS485, USB Port and frontal Key Pad
- Microprocessor based electronic circuit fully isolated from power
- Universal input signal: RS485,Pot, Analog and SSR
- Firing Mode: Zero Crossing and Burst Firing Mode with programmable cycle time
- Configurable Control Mode: V and VxI
- Heather Break alarm to diagnose partial or total load failure and Thyristor Short circuit
- Digital input configurable
- Fixed Fuses Standard
- Current transformer integrated in the unit
- Comply with EMC, cUL pending
- IP20 Protection
- DIN RAIL mounting

TECHNICAL SPECIFICATION

Voltage power supply	24V minimum,480V Standard ,600V option available on all sizes. 690V available from 400 to 700A		
Voltage Frequency	50 or 60 Hz no setting needed from 47 to 70 Hz		
Nominal Current	225A, 300A, 350A, 400A, 450A, 500A,		
Input Signal	SSR (logic)	4:30Vdc	5mA Max (On ≥ 4Vdc Off ≤ 1Vdc);
	Voltage input	0:10Vdc	impedance 15 K ohm;
	Current input	0:20/4:20mA	impedance 100 Ohm;
Digital input	4:30V dc 5 mA Max (On > 4Vdc Off < 1Vdc)		
Firing	Burst Firing and Zero Crossing with possibility to set number of Burst and cycle time		
Control Mode	Voltage and Power selectable via frontal Key Pad, and RS485 or via Digital input to transfer from one control mode to another one to estabilish a control strategy.		
Auxiliary Voltage Supply	90:130Vac 8VA Max 170:265Vac 8VA Max (Standard) 230:345Vac 8VA Max 300:530Vac 8VA Max (Standard) 510:690Vac 8VA Max 600:760Vac 8VA Max		
Heater Break Alarm	HB alarm setting on front unit or RS485 with possibility to set sensitivity. Relay output 0,5A at 110V		
Mounting	DIN RAIL Mounting or Panel Mounting		
Operating Temperature	40 °C without derating. Over this temperature see below derating curve		
Storage temperature	-25 °C to 70 °C Max		
Altitude	Over 1000 m of altitude reduce the nominal current of 2% for each 100m		
Humidity	From 5 to 95% without condense and ice		

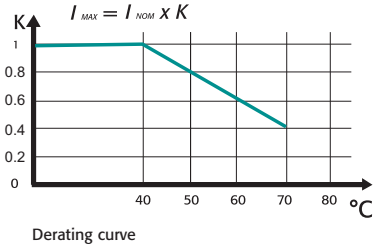

Derating curve

USER'S MANUAL
Rev. 04/2010_version 00001

OPTION'S FEATURES AND SPECIAL DETAILS

HEATER BREAK ALARM (HB)


ON FRONT CABINET



= FEW MINUTES TO SET AND CALIBRATE ALL THE UNITS

The Heather Break circuit diagnostic partial or total load failure. It reads load resistance with an internal voltage transducer and current transformer to calcolate the resitance value V/I
circuit is compensated for voltage fluctuation,infact a voltage variation has no influence on resistance value because V/I ratio remain constant.
On this unit is possible to set the nominal resistance value and the alarm sensitivity.
HB alarm in addition diagnostic the thyristor in short circuit
A normaly open contact gives the alarm condition and an indication of the alarm type appears on display.

BURST FIRING

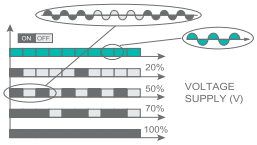

This firing is performed digitally within the thyristor unit at zero volts, producing no EMC interference. Analogue input is necessary for BF and the number of complete cycles must be specified for 50% power demand. This value can be between 1 and 255 complete cycles, determining the speed of firing. When 1 is specified, the firing mode becomes Single Cycle (SC).

CD EASY




This is a memory support tool that can be used by mantenance personnel on shop floor.
The user can copy the configuration of one unit and paste it into another.CD EASY is very simple with one push button to upload the configuration (Read and another to down load the stored configuration (Write)
This tool can be used with our Remote service to mail the working configuration via internet.

FIELD BUS MODULE



CD-RS Used to convert RS232 to RS422
TU-RS485-PDP Used to convert RS485 Modbus to Profibus DP
TU-RS485-DNE Used to convert RS485 Modbus to Devicenet
TU-RS485-ETH Used to convert RS485 Modbus to Ethernet
TU-RS485-CAN Used to convert RS485 Modbus to CAN
For more informations see "Field Bus Module" Bulletin

POWER SCALING

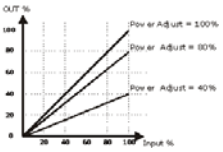


It's a scaling factor of the input command signal and limit the output of Thyristor unit. This parameter can be adjusted from 1 to 99% via RS485 or by the front of the unit If this parameter is setted at 50% and the input signal is 100% the output become 50% This feature is very useful to reduce the power when a zone has been oversized or when a temperature controller gives same reference to more unit along a furnace.
Imagine 3 zones with left and right one close to the doar where in acontinuos furnace the material come into and flow out.The profile of temperature along furnace is higher in central zone because there is less dispersion but if we scale its input we can have a flat profile.


APPLICATIONS AND FOCUS ON:

- Infrared lamp.
- Autoclaves.
- Fournaces.
- Chemical
- Petrochemical
- Extrusion line.
- Dryers
- Climatic chambers
- Pharmaceutical

Wiring connection REVO M 3PH from 300 to 500A

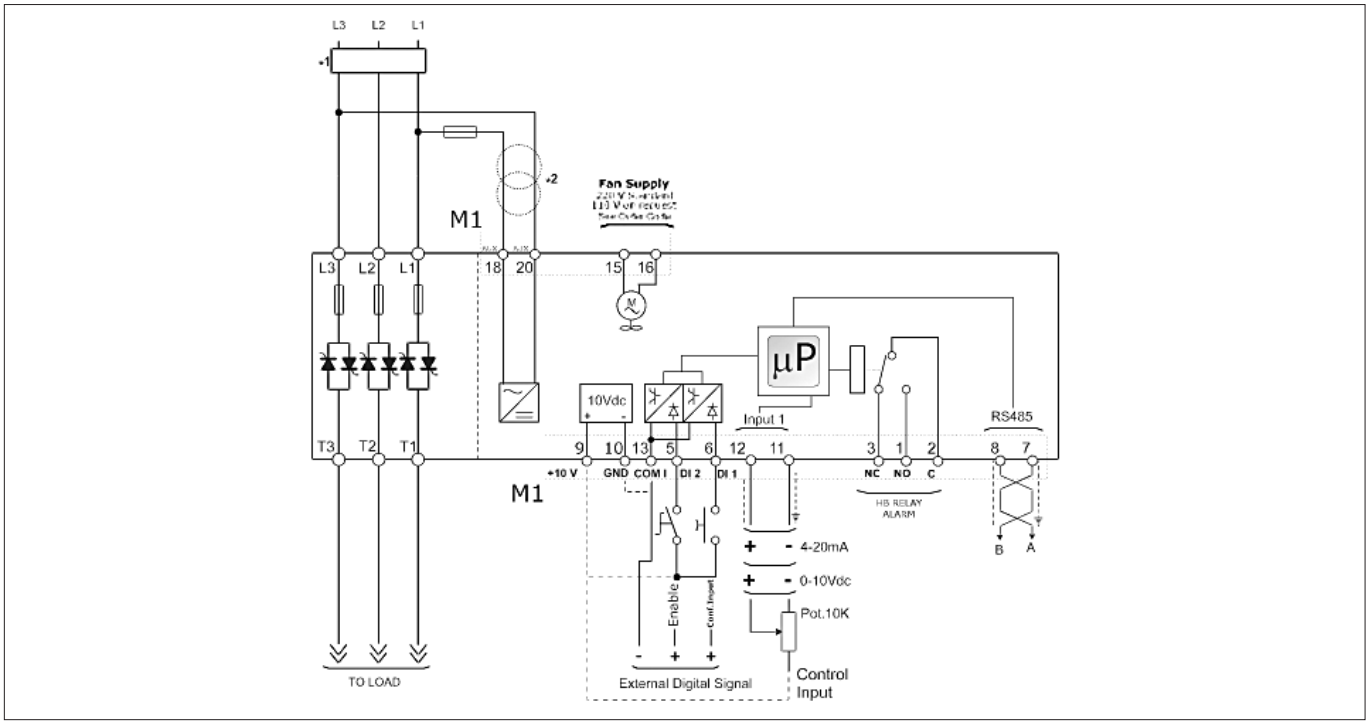


LOAD TYPE

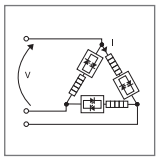

OPEN DELTA
Resistive or Infrared Lamps
Long and medium waves

LOAD TYPE

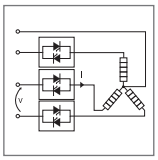

STAR with neutral
Resistive or Infrared Lamps
Long and medium waves

NOTE

(1) • The user installation must be protecting by electromagnetic circuit breaker or by fuse isolator. The semiconductor I^2t should be 20% less than power controller I^2t. Semiconductor fuses are classified for UL as supplemetar protection for semiconductor. They are note approved for branch circuit protection.


(2) • The auxiliary voltage supply of the Revo M unit must be synchronized with loadvoltage power supply. If the Auxiliary Voltage (written on the identification label) is different from Supply Voltage (to the load), use an external transformer as designated.

DIMENSION AND FIXING HOLES



S13 W 262 mm. - H 440 mm. - D 270 mm. - kg. 18


225A

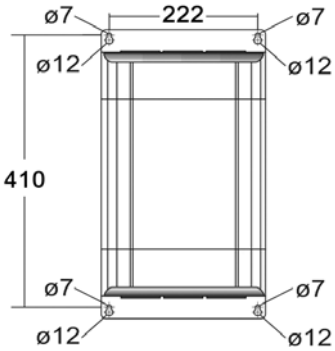



S14 W 262 mm. - H 520 mm. - D 270 mm. - kg. 22,5

300A - 500A

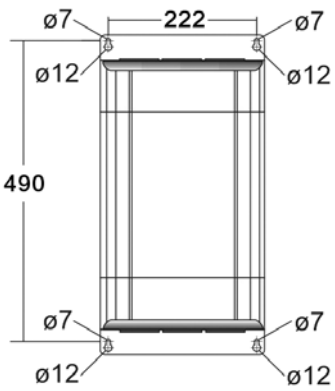

OUTPUT FEATURES (POWER DEVICE)

Current A	Voltage range (V)	Ripetitive peak reverse voltage (480V)	(600V)	(690V)	Latching current (mAeff)	Max peak one cycle (10msec.)	Leakage current (mAeff)	I2T value for fusing tp=10msec	Frequency range (Hz)	Power loss I=Inom	Isolation Voltage Vac
225A	24÷690V	1200	1600	1800	300	4800	15	108000	47÷70	810	2500
300A	24÷690V	1200	1600	1800	300	5250	15	128000	47÷70	1080	2500
350A	24÷690V	1200	1600	1800	200	7800	15	300000	47÷70	1260	2500
400A	24÷690V	1200	1600	1800	200	8000	15	306000	47÷70	1440	2500
450A	24÷690V	1200	1600	1800	1000	17800	15	1027000	47÷70	1620	2500
500A	24÷690V	1200	1600	1800	1000	17800	15	1027000	47÷70	1800	2500

ORDERING CODES REVO M 3PH

Note 1

	1	2	3	4	5	6		7	8	9	10	11	12	13	14	15	16
REVO M - 3 PH	R	M	3	_	_	_	-	_	_	_	_	_	_	_	_	_	_

4, 5, 6 Current

Description code	Numeric code
225A	2 2 5
300A	3 0 0
350A	3 5 0
400A	4 0 0
450A	4 5 0
500A	5 0 0

7 Max Voltage

Description code	Numeric code
480V	4
600V	6
690V	7

8 Aux. Voltage supply

Description code	Numeric code
90:130V (2)	1
170:265V (2)	2
230:345V (2)	3
300:530V (2)	5
510:690V (2)	6
600:760V (2)	7

9 Input

Description code	Numeric code
SSR	S
0:10V dc	V
4:20mA	A
10KPot	K
RS485	R

10 Firing

Description code	Numeric code
Zero Crossing ZC	Z
Burst Firing BF	B

11 Control Mode

Description code	Numeric code
Open Loop	0
Voltage Feed Back V	U
Power Feed Back VxI	W

12 Fuse & Option

Description code	Numeric code
Fixed Fuses	F
Fixed Fuses +CT	Y
Fixed Fuses +CT +HB	H

13 Fan Voltage

Description code	Numeric code
Fan 110V	1
Fan 220V Std Version	2

LEGEND
IF = Internal Fixed Fuse
CT = Current Transformer
HB = Heater Break Alarm

14 Approvals

Description code	Numeric code
CE EMC For European Market	0
cUL For American Market, pending	L

15 Manual

Description code	Numeric code
None	0
Italian Manual	1
English Manual	2
German Manual	3
French Manual	4

16 Version

Description code	Numeric code
Version Std with 3 fuses	1

Note (1): After 16th digit write current and voltage of load inside brackets Ex. (250A-400V).
Note (2): Load voltage must be included in Selected Auxiliary Voltage Range